



COVERALL TYPE 5-B/6-B



COVERALL
TYPE 5-B/6-B



Breathable fabric for ease of use.

It is impermeable to liquids and particles.

Ergonomic construction enables maximum movement comfort.

The hood is fully compatible with face masks.

The wrist and hood have soft rubber band for added protection.



These products meet the requirements of the European Community Regulation 2016/425 where type examination is conducted by **ASOCIACION DE INVESTIGACION DE LA INDUSTRIA TEXTIL (AITEX)** Notified Body No: **0161** and thus are **CE** marked.



Protective Clothing Category III

TYPE 5-B



EN ISO 13982-1:2004+A1:2010
Protection against solid chemical particles

TYPE 6-B



EN 13034:2005+A1:2009
Protective clothing against liquid chemicals



EN 14126:2003+AC:2004
Protective clothing against infective agents



The D-Lab Bioclean Hooded Protective Coverall is a disposable garment that provides comfort and protection from head to toe. Features protective winged front zipper, elastic hood, back, cuffs and ankles.

The front closure is provided with a zipper and the zipper fly is fixed to the opposite wing with double - sided tape.

Easy to put on and take off.



Hooded Design

Three dimensional hood design with elastic band around the face opening, insures a better fit on the face maximizing the protection effect.




Security Tape


Thanks to the security tape, any leakage from the zipper area is prevented.




Elastic Cuff

The cuff uses an internal elastic band to further enhance tightness and protection.

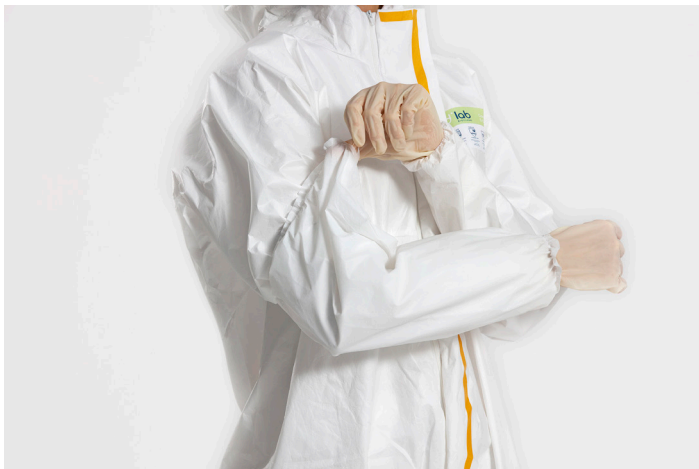




PS 3425 - Type 5-B/6-B





0161

TYPE 5-B



TYPE 6-B





Category III

EN ISO 13688

EN 13034

EN 14126

EN ISO 13982-1

EN ISO 13982-2

EN 14325

EN 13274



d*lab
BIOCLEAN

d-lab.com